
Chrysler

Select the model:

Model Voyager before model 1999

Model Voyager model 1999

Model Grand Cherokee up to 5/1999

Model Stratus before model 1999

Model Stratus after model 1999

Model Jeep Cherokee

Model Jeep Wrangler

Model PT Cruiser

All Chrysler models SRI-memory

Model Voyager before model 1999

Diagnostic programming

Use this plug:



- The diagnostic port is near your left knee when you sit on the driver's seat.
- Turn ignition on.
- Connect the Tacho Universal to Chrysler diagnostic plug and the diagnostic port.
Use the connector CCD.
- Select the menu **Chrysler-Chrysler Diagnosis**.
- The Tacho Universal shows you the old value.
- Enter the new value.
- Verify the new value with **OK**.

Note:

If the new value is not displayed, you have to disconnect the battery for about 2 minutes.

Model Voyager model 1999

Diagnostic programming

Use this plug:



- The diagnostic port is near your left knee when you sit on the driver's seat.
Turn ignition on.
- Connect the Tacho Universal to Chrysler diagnostic plug and the diagnostic port.
Use the connector CCD.
- Select the menu **Chrysler-Chrysler99 Diagnosis**.
- The Tacho Universal shows you the old value.
- Enter the new value.
- Verify the new value with **OK**.

Note:

If the new value is not displayed, you have to disconnect the battery for about 2 minutes.

Model Grand Cherokee up to 5/1999

Diagnostic programming

Use this plug:



- The diagnostic port is near your left knee when you sit on the driver's seat.
Turn ignition on.
- Connect the Tacho Universal to Chrysler diagnostic plug and the diagnostic port.
Use the connector CCD.
- Select the menu **Chrysler-Chrysler Diagnosis**.
- The Tacho Universal shows you the old value.
- Enter the new value.
- Verify the new value with **OK**.

Note:

If the new value is not displayed, you have to disconnect the battery for about 2 minutes.

Model Stratus before model 1999

Diagnostic programming

Use this plug:



- The diagnostic port is near your left knee when you sit on the driver's seat.
Turn ignition on.
- Connect the Tacho Universal to Chrysler diagnostic plug and the diagnostic port. Use the connector CCD.
- Select the menu **Chrysler-Chrysler Diagnosis**.
- The Tacho Universal shows you the old value.
- Enter the new value.
- Verify the new value with **OK**.

Note:

If the new value is not displayed, you have to disconnect the battery for about 2 minutes.

Model Stratus after model 1999

Diagnostic programming

Use this plug:





- The diagnostic port is near your left knee when you sit on the driver's seat.
Turn ignition on.
- Connect the Tacho Universal to Chrysler diagnostic plug and the diagnostic port.
Use the connector CCD.
- Select the menu **Chrysler-Chrysler99 Diagnosis**.
- The Tacho Universal shows you the old value.
- Enter the new value.
- Verify the new value with **OK**.

Note:

If the new value is not displayed, you have to disconnect the battery for about 2 minutes.

Model Jeep Cherokee



Use this board and clip:

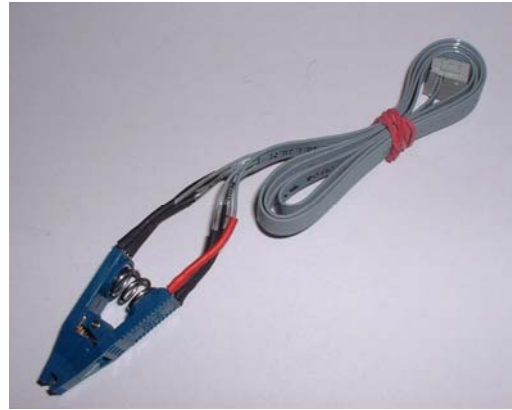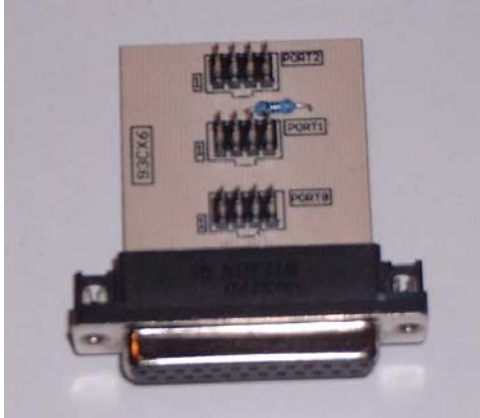

- Remove the cluster and open it.
- Look for the 8 pin chip 93C56.
- Look for the silver chrystal and join its contacts.
- Connect the clip to port 1.
- Put the clip on the chip 93C56 (red on pin 1).
- Select the menu **Chrysler-Jeep Cherokee**
- The Tacho Universal shows you the old value.
- Enter the new value.
- Verify the new value with **OK**.

Model Jeep Wrangler

Use this board and clip:

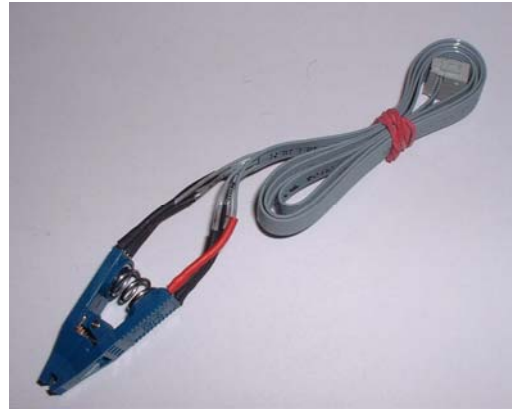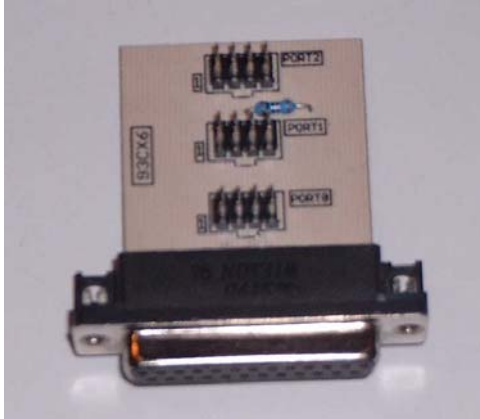

- Remove the cluster and open it.
- Look for the 8 pin chip 93C56.
- Look for the silver chrystal and join its contacts.
- Connect the clip to port 1.
- Put the clip on the chip 93C56 (red on pin 1).
- Select the menu **Chrysler-Jeep Wrangler**
- The Tacho Universal shows you the old value.
- Enter the new value.
- Verify the new value with **OK**.


Model PT Cruiser

Use the scorio plug:



Chrysler / Dodge PT-Cruiser

scorio plug

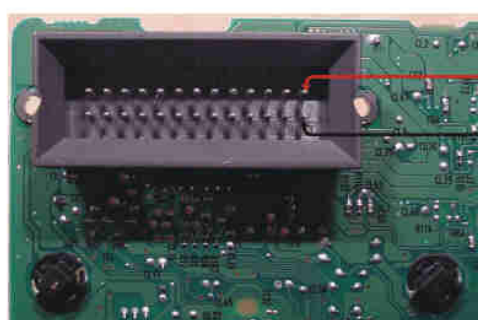

red (12V +)

black (ground)

lift + black



lift + yellow

lift + blue

-
- Remove the cluster and open it.
 - Unsolder the motors
 - Connect the cables as shown in the picture
 - Select the menu **Chrysler- PT-Cruiser**
 - The Tacho Universal shows you the old value.
 - Enter the new value.
 - Verify the new value with **OK**.

All Chrysler models SRI-memory

Use this plug:



Diagnostic programming

Use this plug:



- The diagnostic port is near your left knee when you sit on the driver's seat.
Turn ignition on.
- Connect the Tacho Universal to Chrysler diagnostic plug and the diagnostic port. Use the connector SRI.
- Select the menu **Chrysler-Chrysler SRI**.
- The Tacho Universal shows you the old value.
- Enter the new value.
- Verify the new value with **OK**.

Note:

You need not program this memory, if the Tacho Universal reads 000000 as old value!