


Modell Punto via Can

Cluster has no pin at 0-position for needle



brown circuit board!

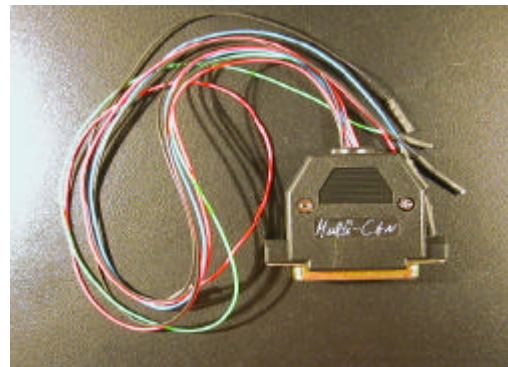

multi can plug

Connect the cluster with the multi-can plug + can box


Select the menu [Fiat Punto Diag](#)

The Tacho Universal shows you the old km

Select [adjust km](#)

Enter the new value and press [OK](#)

Fiat Punto via Can

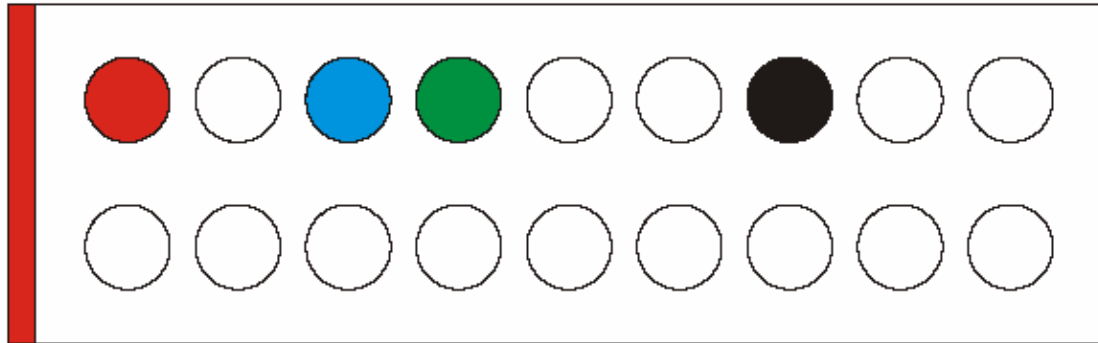

Cluster has no pin at 0-position for needle