


Model Opel Astra 2004 VDO

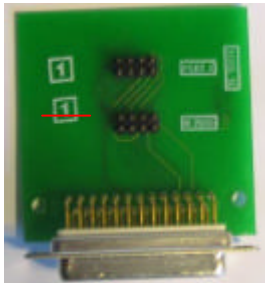

Benutzen Sie folgende Platine und Klammer

- ? Remove the cluster and open it
- ? Look for the EEPROM 35080.
- ? **Desolder this EEPROM.**
- ? Connect the clip with port **M 35080**.
- ? Put the clip on EEPROM 35080 (**red to pin 1**).
- ? Select the menu **Opel -> Astra -> 2003 VDO -> clip**
- ? The Tacho Universal shows you the old value
- ? Select the menu **SAVE**

(

- ? Select the menu [Opel-> Astra->2003 VDO -> 350800->0](#)
- ? Wait until the Tacho Universal shows you [Ok](#)
- ? Select the menu [Opel-> Astra-> 2003 VDO -> clip](#)
- ? Select the menu [Load](#).
- ? Now select the data you have saved and program it back with [write all](#)
- ? If the Diga says Data not qual ist ok anyway!
- ? Select the menu [adjust km](#).
- ? Enter the new value and press [ok](#)