



## Model Picasso 2004

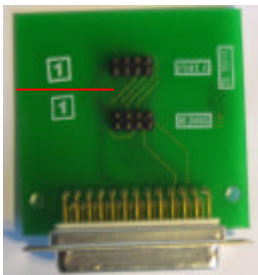

**Eeprom 95020 in cluster must be desoldered and programmed to 0.**

## BSI

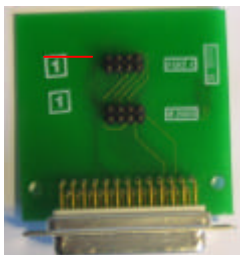

**Eeprom 95160 must be desoldered and programmed to new value.**