
Nissan

Select the model:

Model Almera

Model Maxima

Model Micra

Model Primera before 1999

Model Primera after 1999

Model Patrol

Model Pathfinder



Model Navaro

Model Pickup

Model Terrano

Model Almera



Use this board and clip:

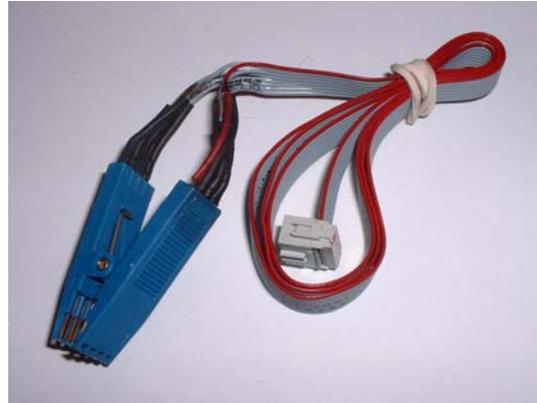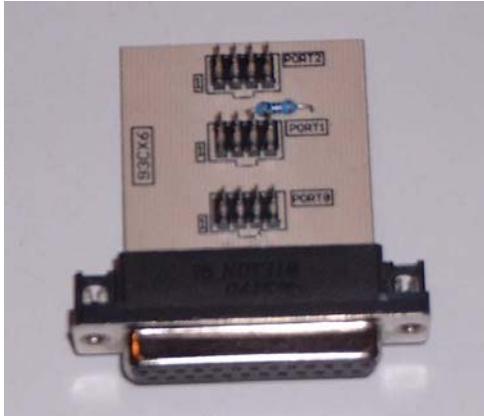

- Remove the cluster and open it.
- Look for the 8 pin chip 93C46.
- Look for the silver chrystral and join its contacts.
- Connect the clip to port 1.
- Put the clip on the chip 93C46 (red on pin 1).
- Select the menu **Nissan-Almera**
- The Tacho Universal shows you the old value.
- Select the menu **Adjust KM.**
- Enter the new value.
- Verify the new value with **OK.**

Model Maxima



Use this board and clip:

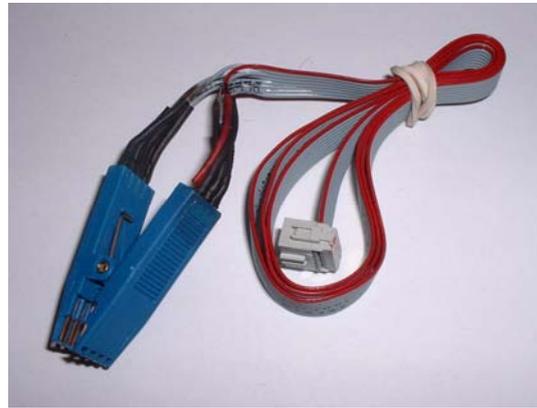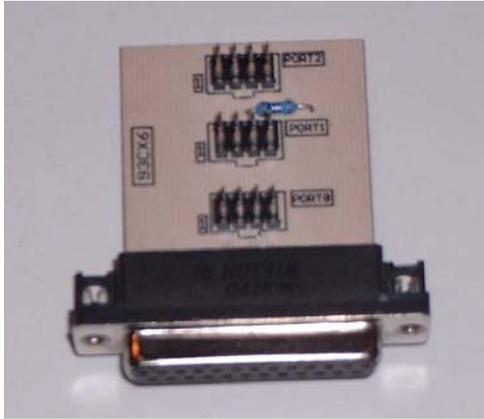

- Remove the cluster and open it.
- Look for the 8 pin chip 93C46.
- Look for the silver crystal and join its contacts.
- Connect the clip to port 1.
- Put the clip on the chip 93C46 (red on pin 1).
- Select the menu **Nissan-Maxima**
- The Tacho Universal shows you the old value.
- Select the menu **Adjust KM.**
- Enter the new value.
- Verify the new value with **OK.**

Model Micra


Use this board and clip:

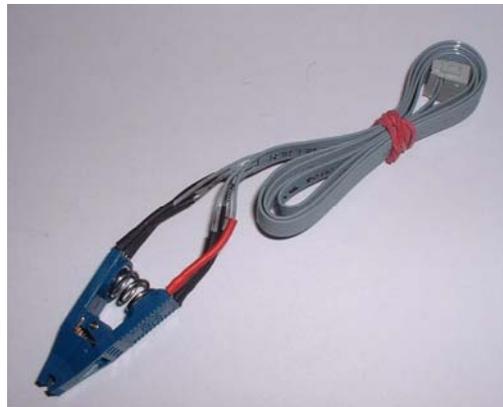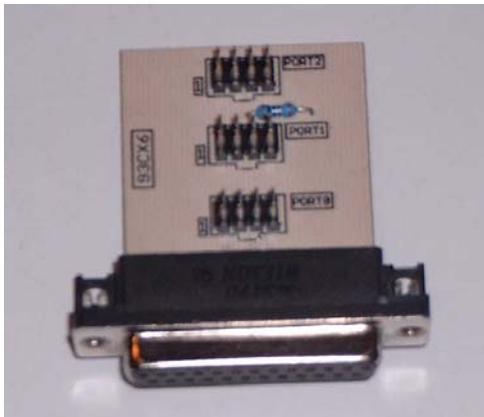

- Remove the cluster and open it.
- Look for the silver crystal and join its contacts.
- Look for the 8 pin chip 93C56.
- Connect the clip to port 1.
- Put the clip on the chip 93C56 (red on pin 1).
- Select the menu **Nissan-Micra**
- The Tacho Universal shows you the old value.
- Select the menu **Adjust KM.**
- Enter the new value.
- Verify the new value with **OK.**

Model Primera before 1999

Use this board and clip:


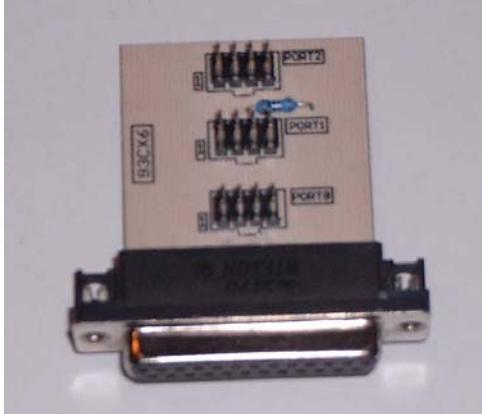


- Remove the cluster and open it.
- Look for the 8 pin chip 93C46.
- Unsolder this chip.
- Connect the clip to port 0.
- Put the clip on the chip 93C46 (red on pin 1).
- Select the menu **Nissan-Primera**.
- The Tacho Universal shows you the old value.
- Select the menu **Adjust KM**.
- Enter the new value.
- Verify the new value with **OK**.


Model Primera after 1999



Use this board and clip:

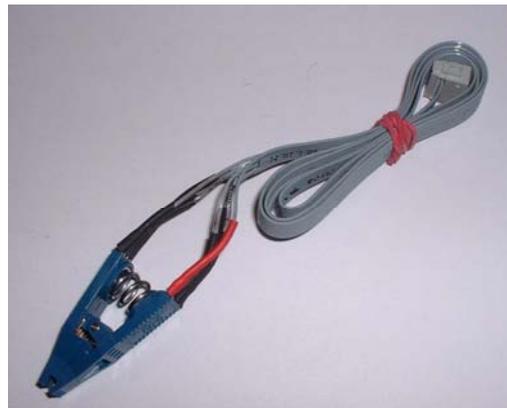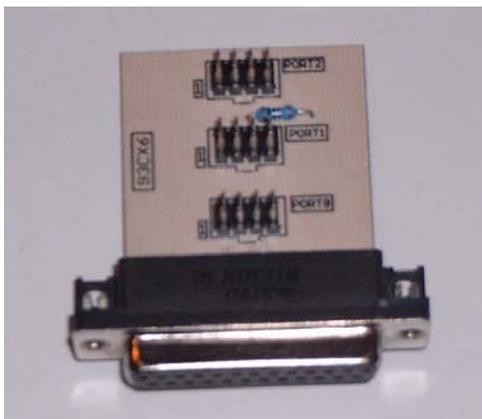


-
- Remove the cluster and open it.
 - Look for the 8 pin chip 93C46.
 - Unsolder this chip.
 - Connect the clip to port 0.
 - Put the clip on the chip 93C46 (red on pin 1).
 - Select the menu **Nissan-Primera**
 - The Tacho Universal shows you the old value.
 - Select the menu **Adjust KM.**
 - Enter the new value.
 - Verify the new value with **OK.**

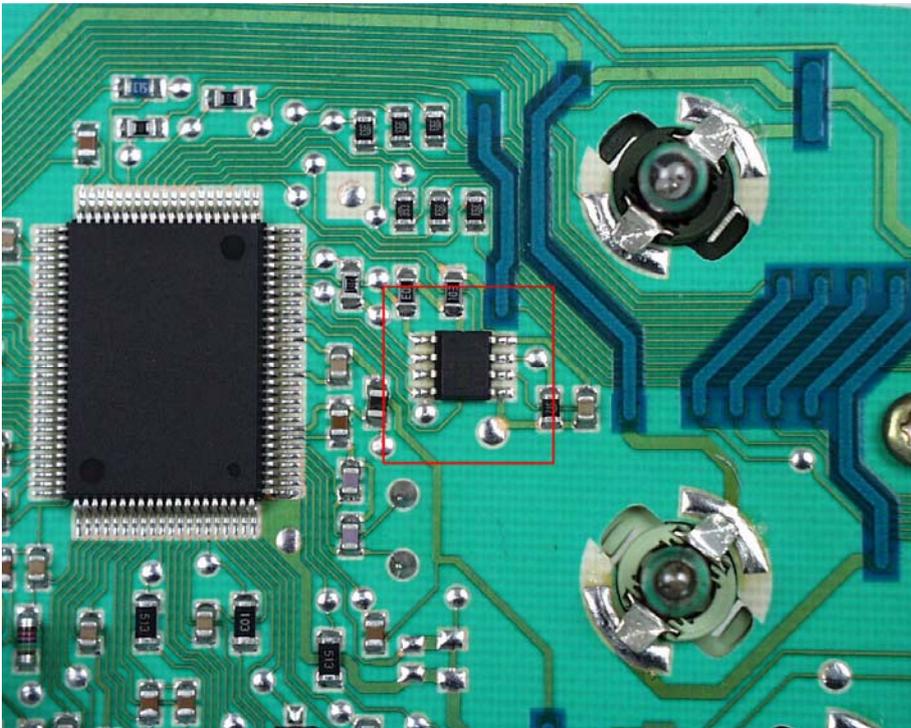

Model Patrol




- Remove the cluster and open it.
- Look for the 8 pin chip 93C56
- Unsolder this chip.
- Connect the clip to port 0.
- Put the clip on the chip 93C56 (red on pin 1).
- Select the menu **Nissan-Patrol**
- The Tacho Universal shows you the old value.
- Select the menu **Adjust KM.**
- Enter the new value.
- Verify the new value with **OK.**

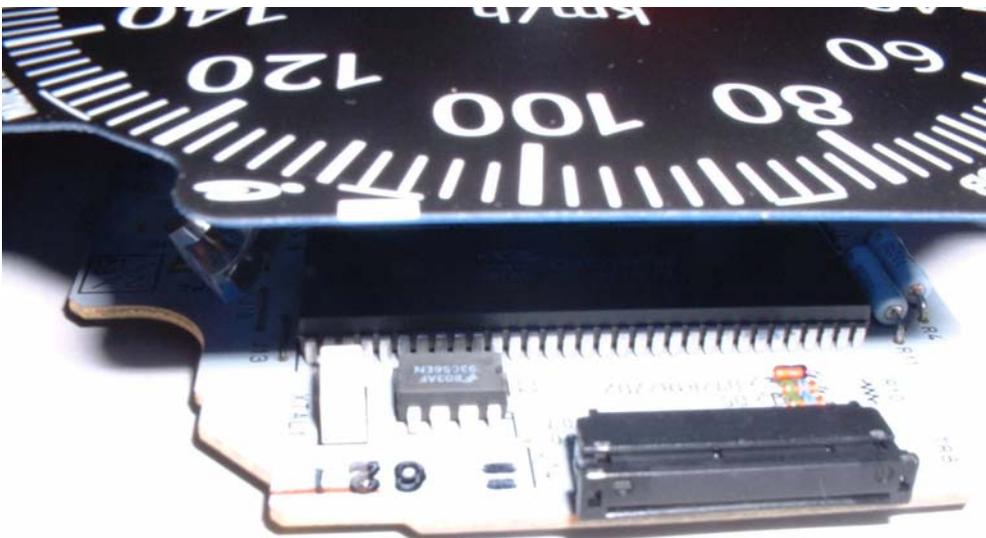

Model Pathfinder





- Remove the cluster and open it.
- Look for the 8 pin chip 93C46 or 96C56.
- Unsolder this chip.
- Connect the clip to port 0.
- Put the clip on the chip 93C46 or 93C56 (red on pin 1).
- Select the menu **Nissan-Pathfinder-Pfinder C46 or Pfinder C56**
- The Tacho Universal shows you the old value.
- Select the menu **Adjust KM.**
- Enter the new value.
- Verify the new value with **OK.**

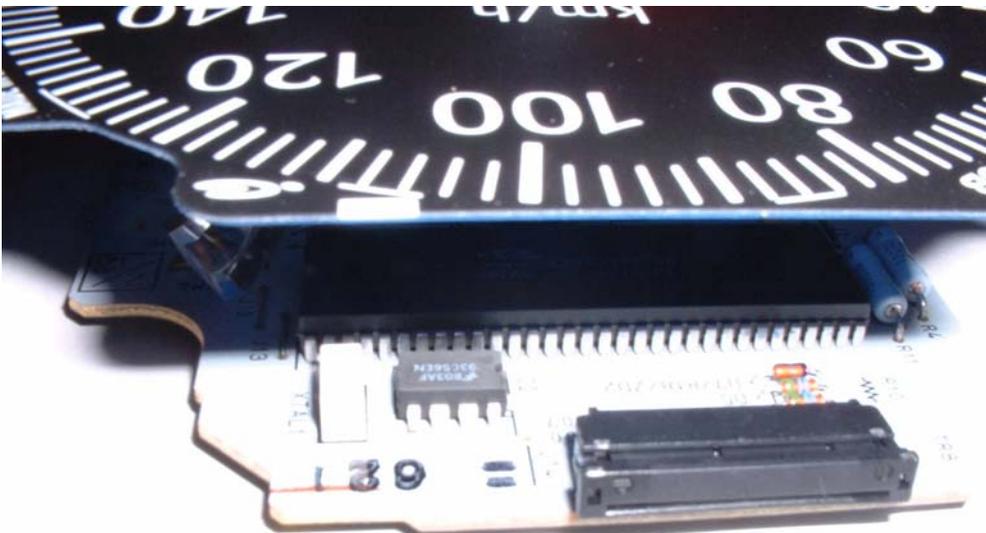

Model Nawaro



Use this board and clip:

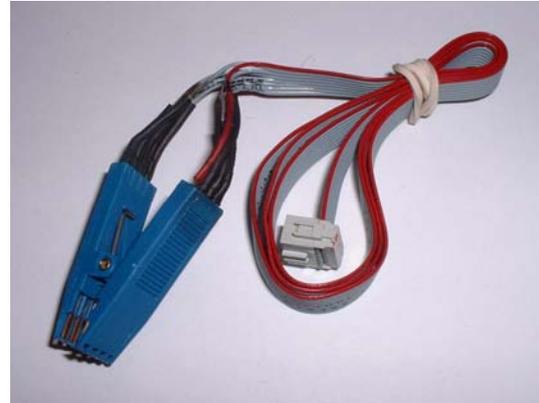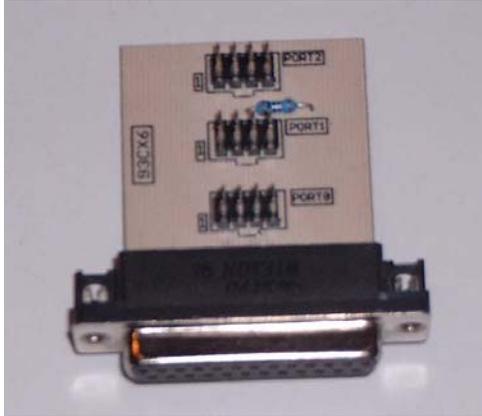

- Remove the cluster and open it.
- Look for the 8 pin chip 93C46.
- Look for the silver chrystal and join its contacts.
- Connect the clip to port 1.
- Put the clip on the chip 93C46 (red on pin 1).
- Select the menu **Nissan-Nawaro**
- The Tacho Universal shows you the old value.
- Select the menu **Adjust KM.**
- Enter the new value.
- Verify the new value with **OK.**

Model Pickup

Use this board and clip:

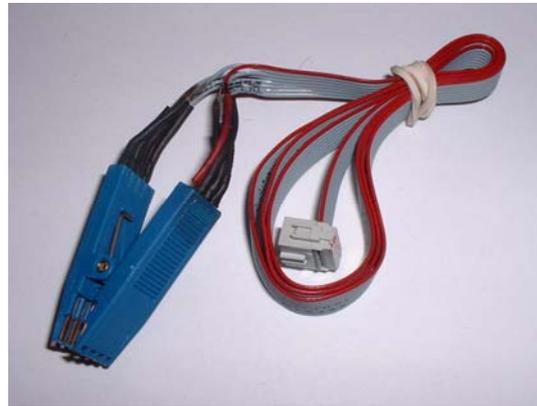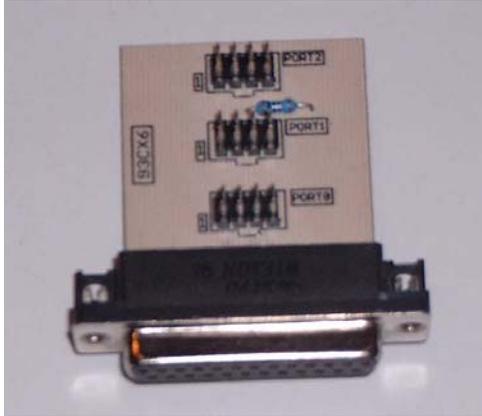

- Remove the cluster and open it.
- Look for the 8 pin chip 93C46.
- Look for the silver chrystal and join its contacts.
- Connect the clip to port 1.
- Put the clip on the chip 93C46 (red on pin 1).
- Select the menu **Nissan-Pickup**
- The Tacho Universal shows you the old value.
- Select the menu **Adjust KM.**
- Enter the new value.
- Verify the new value with **OK.**

Model Terrano

Use the 908 plug:



- Remove the cluster and open it
- Connect the cables as shown in the picture.
- Connect the plug to the Tacho Universal.
- Select the menu **Nissan-Terrano 908**
- The Tacho Universal shows you the old value.
- Enter the new value.
- Verify the new value with **OK**.

